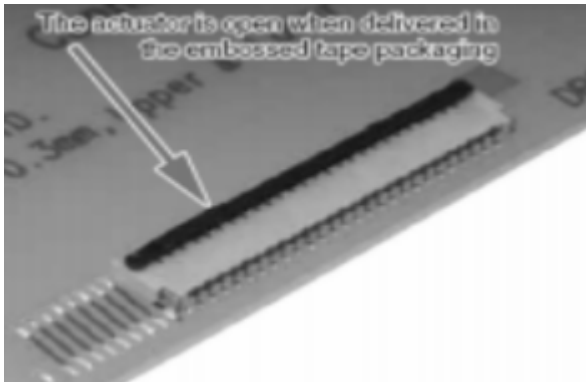
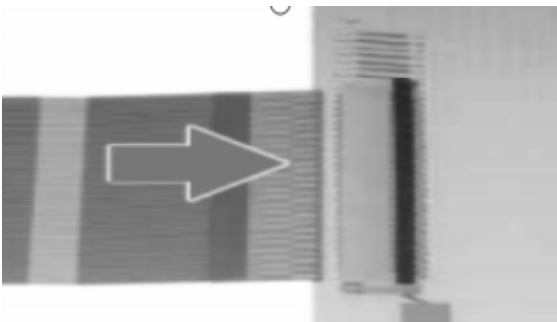
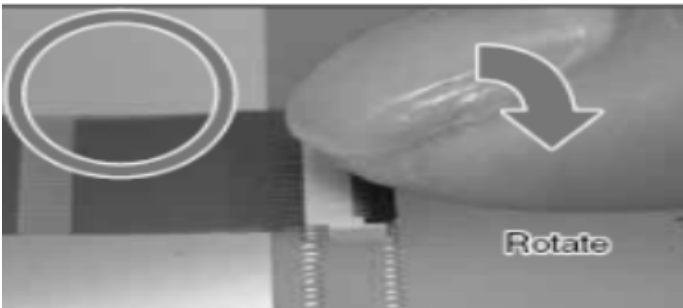



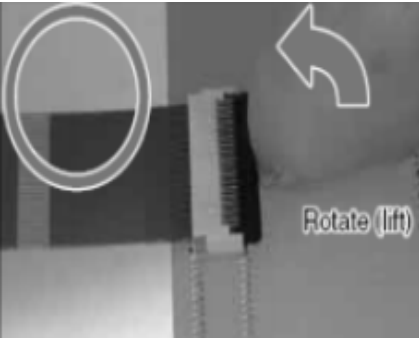

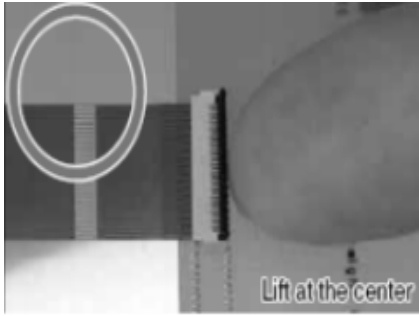
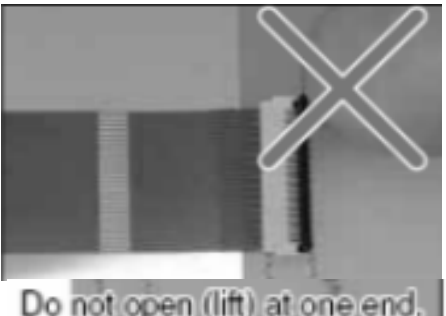


Scope:

This operating instruction covers the FFC03009 series.

Describe	Pictorial view
1. As Delivered	
Delivered with the actuator open. There is no need to operate the actuator prior to the insertion of FPC.	
2. FPC insrtion	
Align the FPC Perpendicular with the connector and insert it firmly all the way.	
3. Locking	
After FPC/FFC insertion ,rotate the actuator down to a full stop pushing it at the center.	
	

	 <p>Excessive force after the actuator is already closed</p>  <p>Do NOT close at the ends.</p>
4. FPC removal (Lock release)	
<p>Carefully rotate the actuator up to 90°, lifting it at the center.</p>	 <p>Rotate (lift)</p>  <p>Do not attempt to open more than 90°</p>  <p>Lift at the center</p>  <p>Do not open (lift) at one end.</p>
5. Warning!!	
<p>The roughness of PCB board must be in 0.1 mm Max.</p>	